



Demontage des Scroll-Kompressor SF 4 FF • Disassembly of the Scroll-Compressor SF 4 FF

HDM 91.102.9005

### Austausch des Scroll-Kompressor SF 4 FF aus dem Luftversorgungsschrank ScrollStar plus

Demontage:

- Hauptschalter an der Druckmaschine ausschalten und gegen Wiedereinschalten sichern.
- Elektrostecker (Abb. 6 / M4:X1) ziehen.
- Tür (Abb. 3 / t) und (Abb. 5 / t<sub>1</sub>) des ScrollStar plus durch Abnehmen öffnen.

#### **! Warnung – kein Druck im Leitungssystem**

Bei Nichtbeachtung können schwere Verletzungen an Personen die Folge sein!  
Es ist darf kein Druck im Leitungssystem anstehen. Kontrolle durch Manometer (Abb. 4 / GP) am Bedienfeld des Kompressors SF 4 FF.

- Druckleitung (Abb. 4 / B<sub>2</sub>) demontieren.
- Platte (Abb. 1 + 6 / u<sub>2</sub>) abnehmen.
- Befestigungswinkel (Abb. 1 / u<sub>3</sub>) auf der Rückseite des Kompressors im Sockelbereich lösen.
- Die 4 Schrauben der Anschlussplatte (Abb. 2 + 4 / u<sub>1</sub>) lösen, Anschlussplatte (u<sub>1</sub>) nach vorne aus der Arretierung ziehen.
- Fronttür des Kompressors SF 4 FF öffnen und Blech (Abb. 2 / u<sub>4</sub>) abnehmen.
- Befestigungskralen (Abb. 2 / u<sub>5</sub>) in der Innenseite an der Bodenplatte lösen.
- Kompressor SF 4 FF aus dem Schrank entnehmen.

Die Montage erfolgt in umgekehrter Reihenfolge.

### Exchange of the Scroll-Compressor SF 4 FF out of the air center ScrollStar plus

Disassembly:



- Switch off main switch on the printing machine and ensure that the unit cannot be restarted.
- Unclip the electrical plug (pict. 6 / M4:X1).
- Remove door (pict. 3 / t) and (pict. 5 / t<sub>1</sub>) of the ScrollStar plus.

#### **! Warning – no pressure left in pipework**

Any non compliance may lead to severe injury to persons!  
There must be no pressure in the pipework. Check by gauge (pict. 4 / GP) on the operating panel of the compressor SF 4 FF.

- Remove pressure pipe (pict. 4 / B<sub>2</sub>).
- Remove plate (pict. 1 + 6 / u<sub>2</sub>).
- Remove fixing angle (pict. 1 / u<sub>3</sub>) on the backside of the compressor in the base area.
- Remove the 4 screws of the connection plate (pict. 2 + 4 / u<sub>1</sub>), pull out the connection plate (u<sub>1</sub>) from the catch to the front.
- Open the front door of the compressor SF 4 FF and remove sheet (pict. 2 / u<sub>4</sub>).
- Remove fixing claws (pict. 2 / u<sub>5</sub>) inside on the bottom plate.
- Remove compressor SF 4 FF out of the box.

Re-assemble in reverse order.

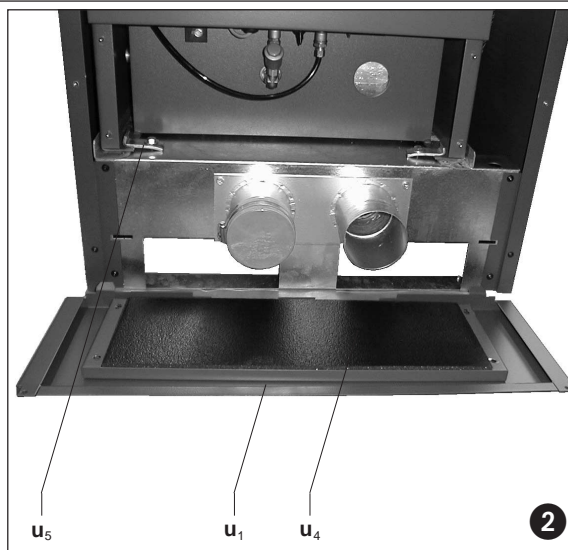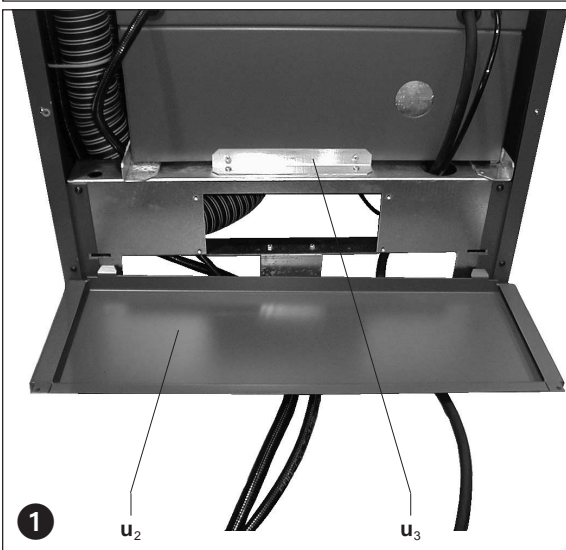

M 5

1.3.2001

**Werner Rietschle  
GmbH + Co. KG**

Postfach 1260  
79642 SCHOPFHEIM  
GERMANY

☎ 07622 / 392-0

Fax 07622 / 392300

E-Mail: info@rietschle.com

http://www.rietschle.com



ScrollStar SF 4 FF

